


Installation Instructions

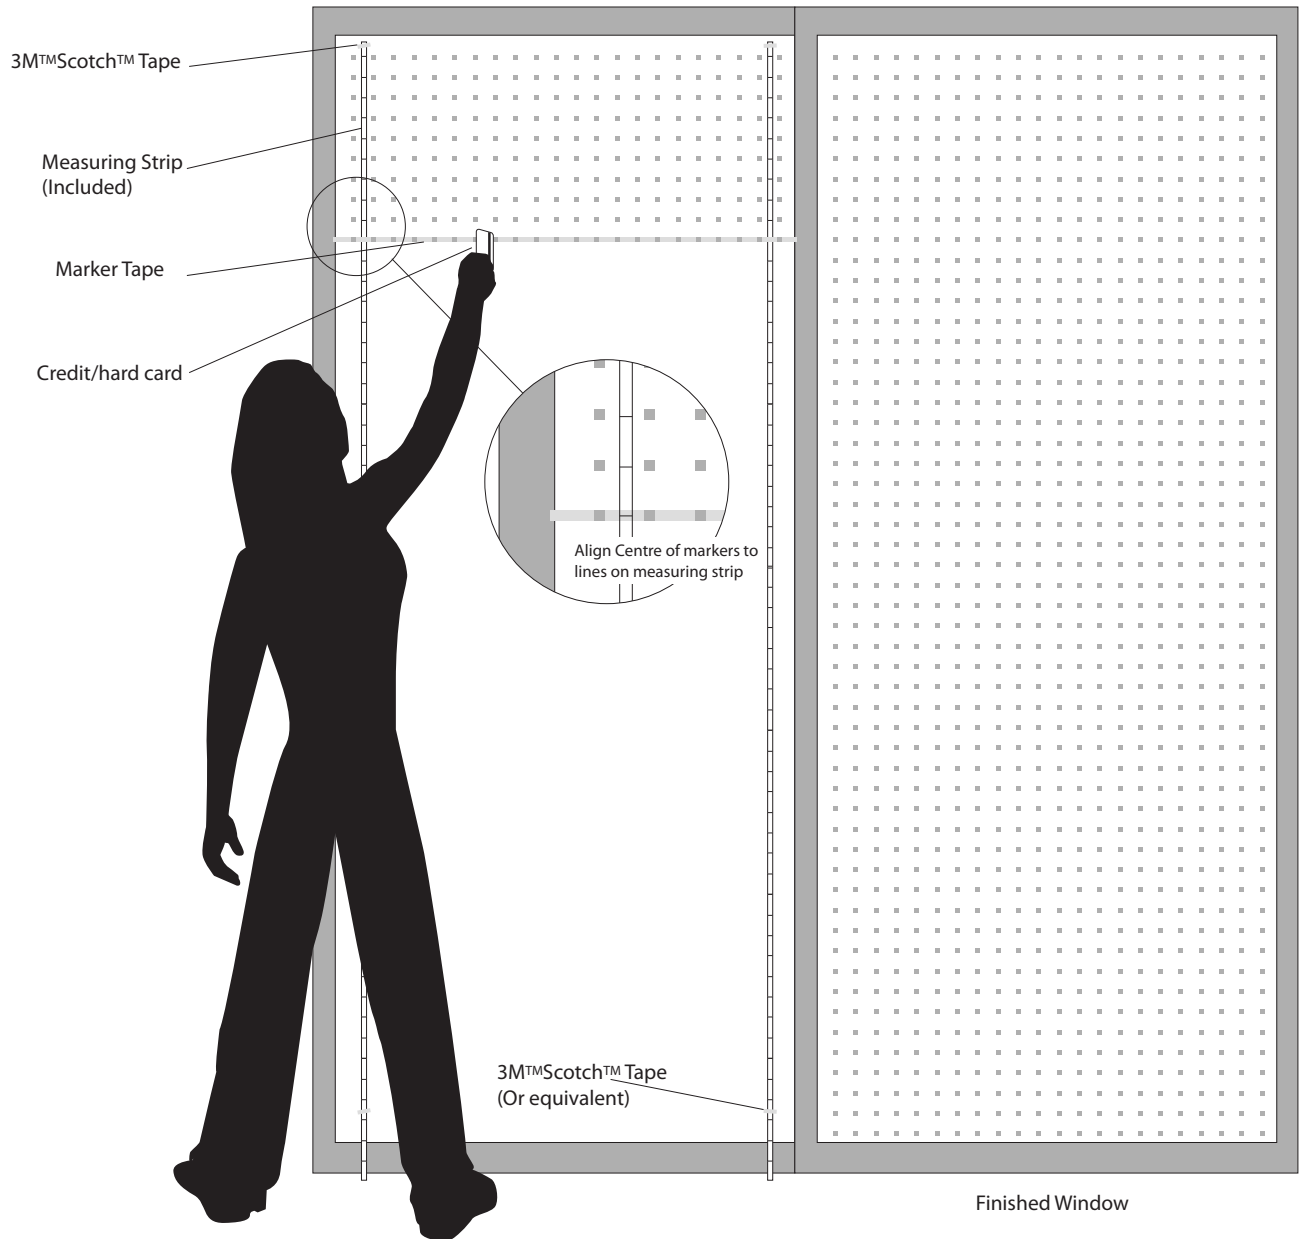

Step 1:
Clean window using a solution consisting of 50/50 water and acetone or nail polish remover and dry completely before starting.

Step 2:
Run the measuring strip provided along one side of the window. Fix in place using a piece of 3M™Scotch™ tape (or equivalent) at the top and bottom. Position the first line of the strip exactly 2" below window frame. Repeat for the other side of the window.

Step 3:
Unroll and cut a length of marker tape slightly larger than the width of the window. Align centre of markers with the first line on both measuring strips then pull taut and stick in position at both ends with tape. Run your thumb along the tape lightly.

Step 4:
Run a credit/hard card across prespace tape a few times to release air and activate pressure sensitive adhesive. Slowly peel prespace tape back keeping it flat against glass while leaving markers in place. If markers peel off run card across again.

Step 5:
Repeat steps 3 and 4 for every row of the measuring strip. Stop 2" above window frame.